
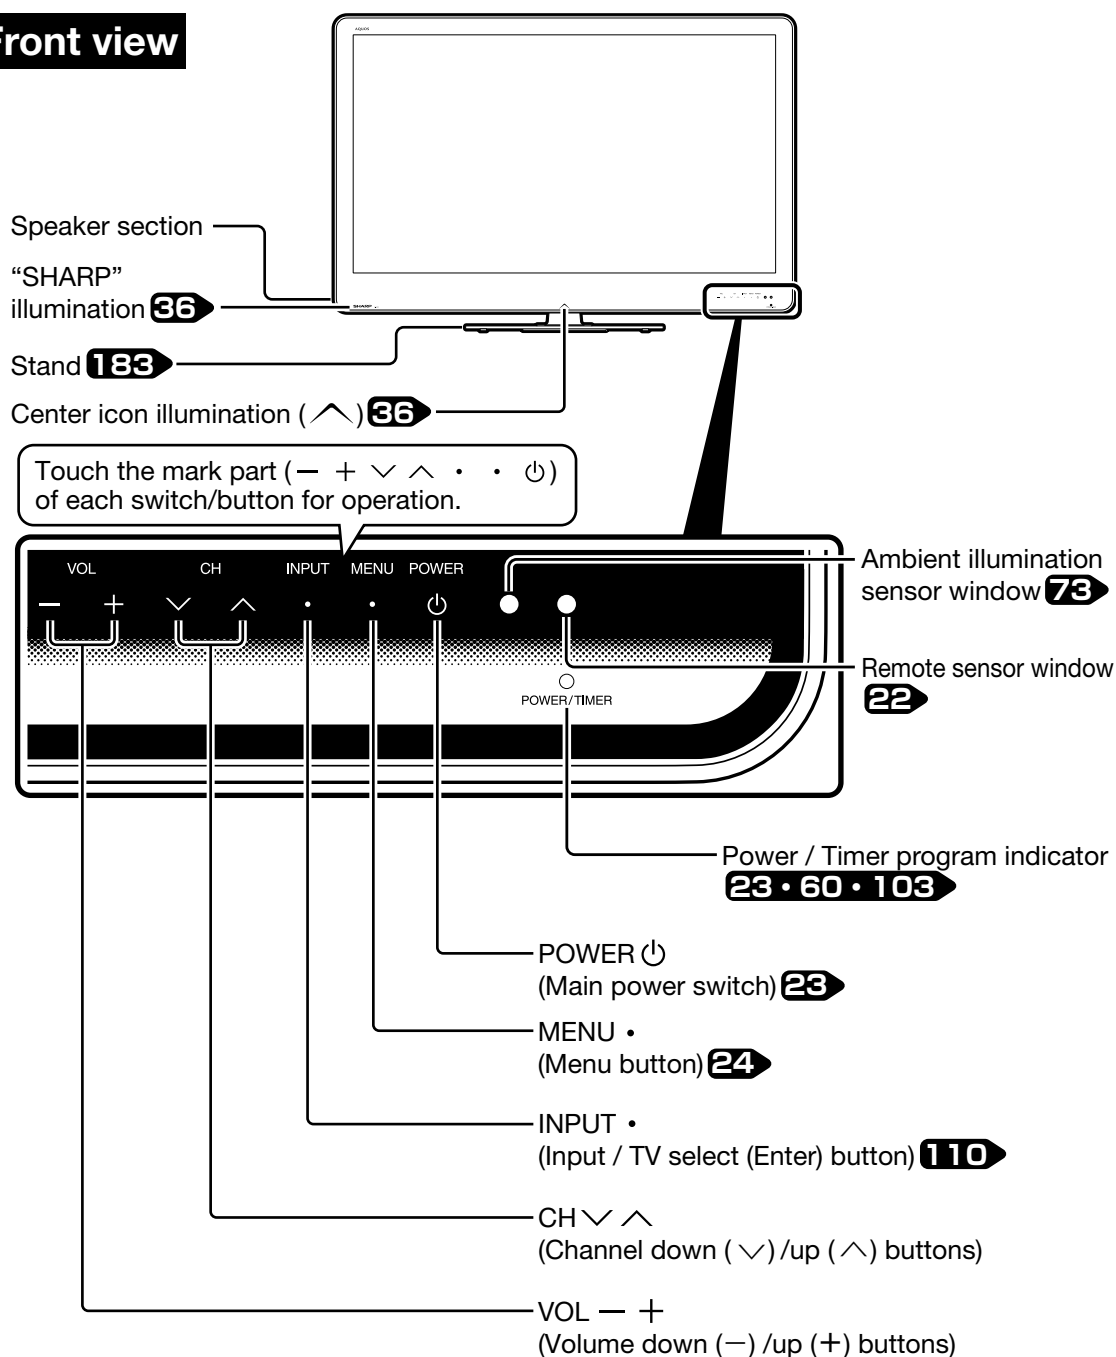 


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

 
Front view



Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Back view

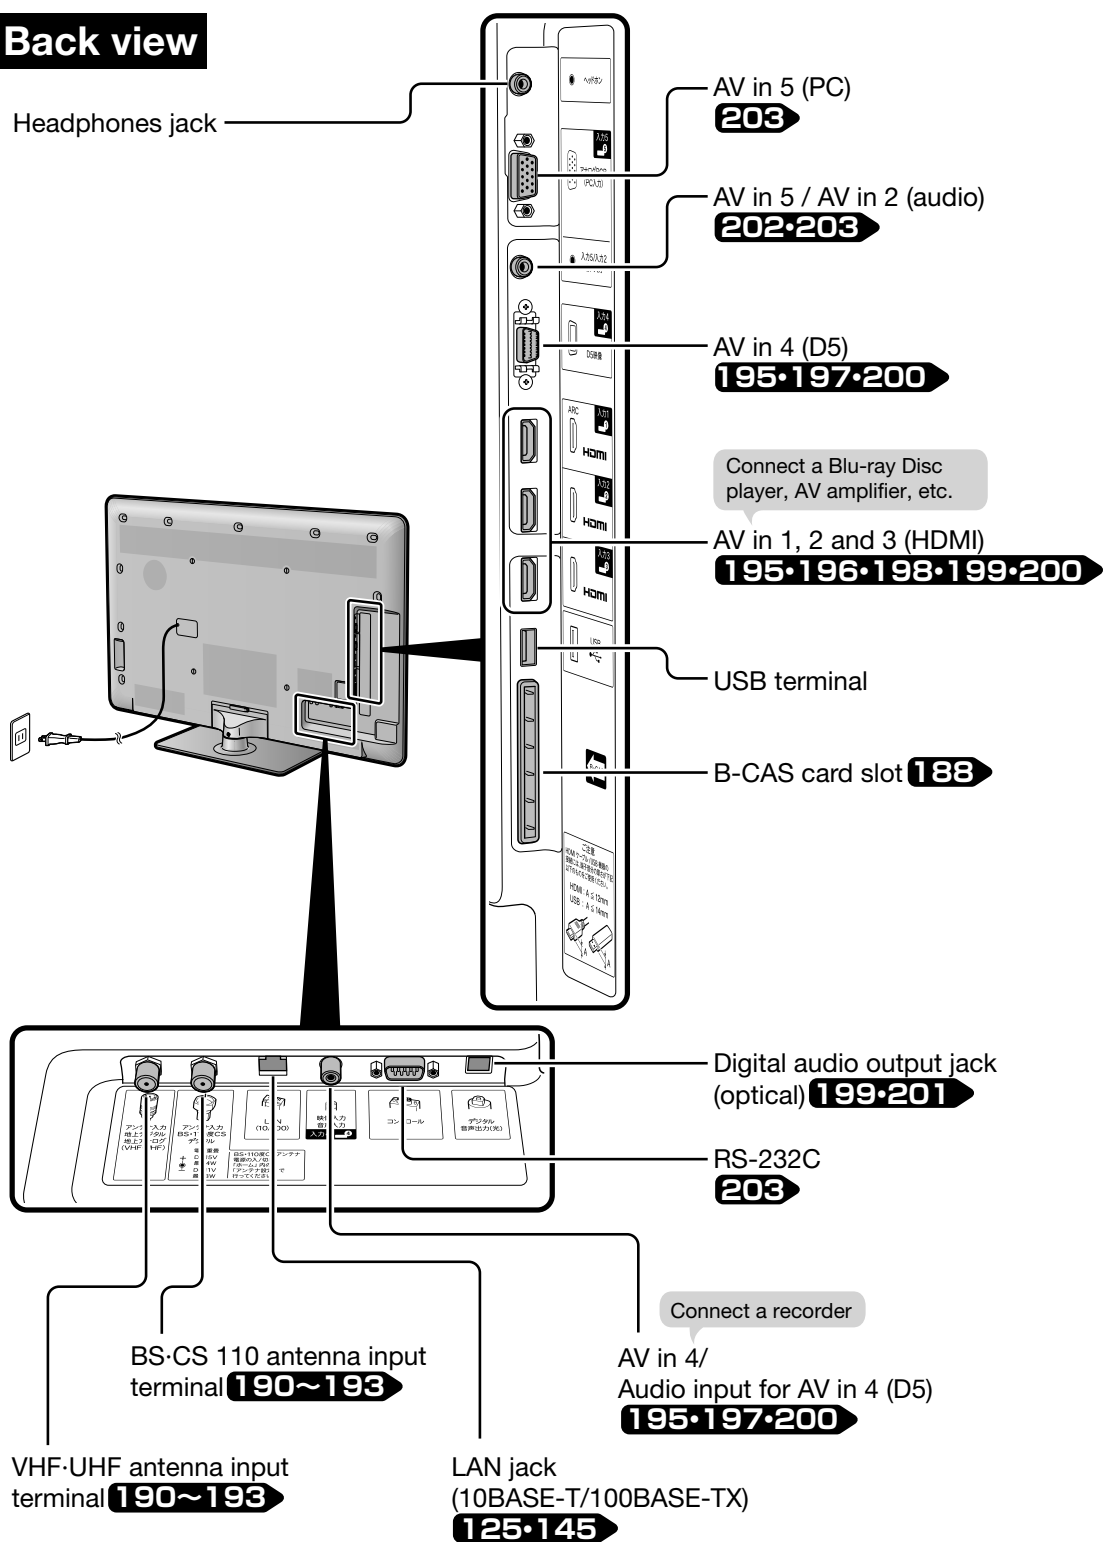

Remote Control Unit

See Page 30 for how to select a program.

Active/Standby **23**

Press to engage the TV set in the active or standby mode.

Recommended programs select **48~50**

Press to select a program which the TV set recommends.

Power saving mode **84~85**

Select power saving settings.

CATV **32**

Digital channel number input

Display **34•35•259**

Press to display or turn off the channel call, etc.

AV mode select **67**

Freeze **36**

Channel select **30•150**

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial

Digital/BS/CS **30**

Select the CS digital channel for the first time. **212**

Mute **30•150**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) **30•150**

Press to adjust the volume.

EPG **41•102**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Sleep timer **81**

Media select **30•33**

Familink

98•100•101•104~105•108

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Display the operation panel of VOD **155•159•171**

View the Internet or IPTV **133•150•154•158**

Caption **52**

Picture select **52**

Audio select **51•52**

Split screen **54~55**

Press to switch between the split screen mode and the normal screen mode.

Operable screen **56**

Press to switch the operable screen when the TV set is in the split screen mode.

Input select **110**

Channel up (^)/down (v) **30•39•150•229**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu **24•25**

Cursor (up, down, left, right) **24•25**

Enter/Confirm **25**

Return **24**

Display the Tool Menu **28**

Linked data broadcast **33•151**

Color **33•42•43•88**

Use to operate EPGs and data program screens.



Switching the Display Language to English ホームメニューなどの言語を英語にする


- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press
 and select with





Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ



2

Select with



Select “ (視聴準備)” (View Setting).
「 (視聴準備)」を選ぶ



 
3

Select with



Press

Select “Language(言語)”.
「Language(言語)」を選ぶ

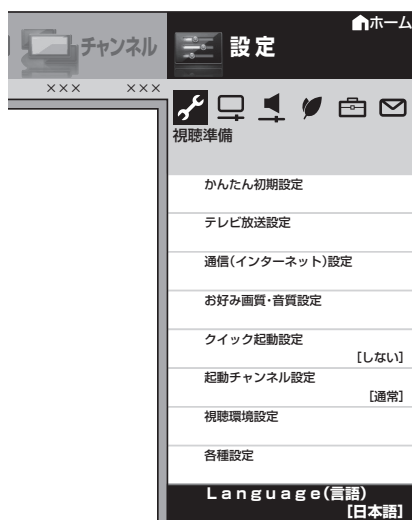

4

Select with



Press

Select “English”.
「English」を選ぶ

Enter.
決定する



5

Press



Finish this operation.
終了する

- The menu screen is now displayed in English.
- 画面表示が英語になります。

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリーリンク

ビデオ・オーディオ・
パソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索引)

English Guide